



**ROSTRA 250-8076: '07- TOYOTA CAMRY REARSIGHT
CAMERA-TO-OEM NAVIGATION INTERFACE KIT**

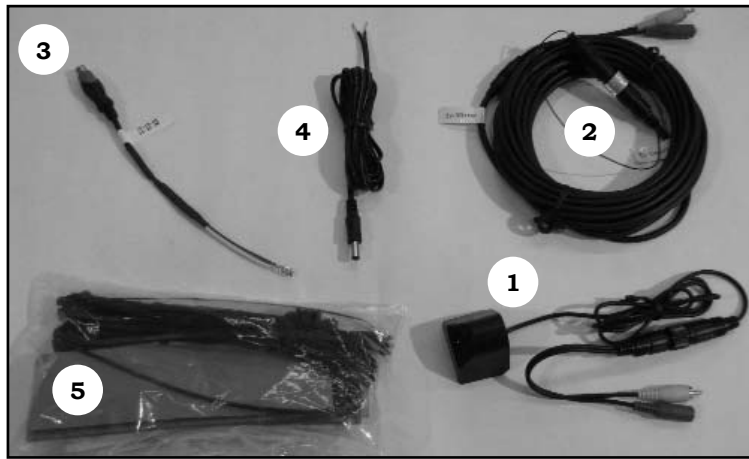


ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	250-8112	REARSIGHT CAMERA ASSEMBLY
2	1	250-8550	CAMERA EXTENSION HARNESS
3	1	250-8521	NAVIGATION INTERFACE HARNESS
4	1	250-8505	CAMERA POWER HARNESS
5	1	250-8522	HARDWARE PACKAGE

REMOVE THE TRUNK LID CARPETING AND THE TRIM PANEL ABOVE THE LICENSE PLATE. ROUTE THE CAMERA HARNESS THROUGH THE LIGHT FIXTURE AS SHOWN IN **FIGURE 1**. USE THE SUPPLIED WEATHER SEALANT AROUND THE AREA ENTERED. MOUNT THE CAMERA TO THE TRIM PANEL AS SHOWN IN **FIGURE 2**. MOUNT THE TRIM PANEL TO THE TRUNK LID, BEING CAREFUL NOT TO CRIMP THE CAMERA HARNESS. PULL SLACK THROUGH AND SEAL THE GROMMET WITH PUTTY. **FIGURE 3** SHOWS A MOUNTED CAMERA.

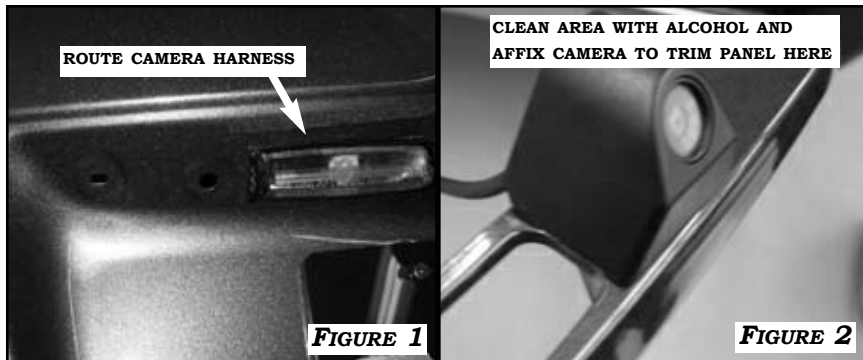


FORM #5103, REV. A, 09-02-09

**ROSTRA 250-8076: '07- TOYOTA CAMRY REARSIGHT
CAMERA-TO-OEM NAVIGATION INTERFACE KIT**

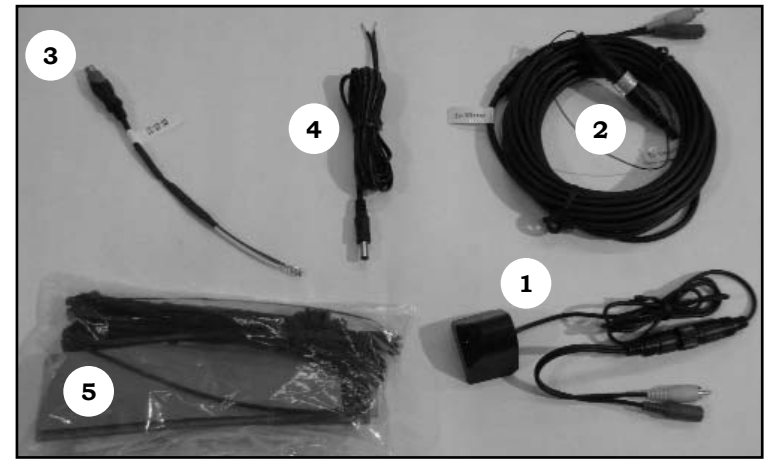

ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	250-8112	REARSIGHT CAMERA ASSEMBLY
2	1	250-8550	CAMERA EXTENSION HARNESS
3	1	250-8521	NAVIGATION INTERFACE HARNESS
4	1	250-8505	CAMERA POWER HARNESS
5	1	250-8522	HARDWARE PACKAGE

REMOVE THE TRUNK LID CARPETING AND THE TRIM PANEL ABOVE THE LICENSE PLATE. ROUTE THE CAMERA HARNESS THROUGH THE LIGHT FIXTURE AS SHOWN IN **FIGURE 1**. USE THE SUPPLIED WEATHER SEALANT AROUND THE AREA ENTERED. MOUNT THE CAMERA TO THE TRIM PANEL AS SHOWN IN **FIGURE 2**. MOUNT THE TRIM PANEL TO THE TRUNK LID, BEING CAREFUL NOT TO CRIMP THE CAMERA HARNESS. PULL SLACK THROUGH AND SEAL THE GROMMET WITH PUTTY. **FIGURE 3** SHOWS A MOUNTED CAMERA.

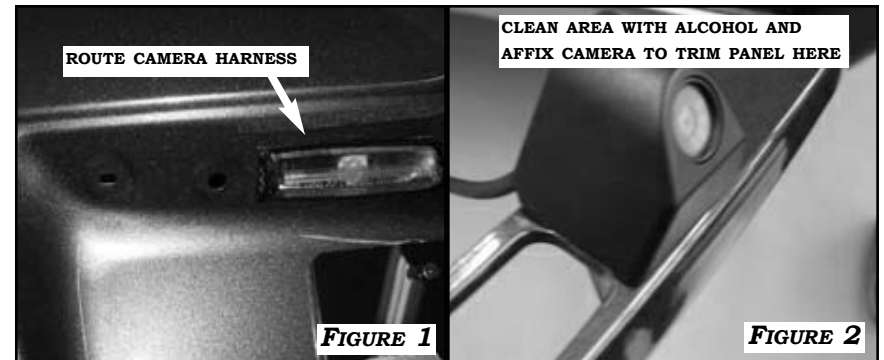

FORM #5103, REV. A, 09-02-09



FIGURE 3

CONNECT THE **CAMERA EXTENSION HARNESS** TO THE **CAMERA HARNESS** AND ROUTE IT FROM THE TRUNK LID TO THE DASH. REMOVE THE 24-PIN CONNECTOR FROM THE RADIO. INSERT THE **WHITE WIRE** OF THE **NAVIGATION INTERFACE HARNESS** INTO PIN 23 OF THE CONNECTOR AND INSERT THE RED WIRE INTO PIN 22 OF THE CONNECTOR (**FIGURES 4-5**). THE TERMINALS WILL ONLY FIT INTO THE

CONNECTOR IN ONE DIRECTION. MAKE SURE THEY SNAP INTO PLACE, RE-ENGAGE THE TERMINAL RETAINER AND REPLACE THE CONNECTOR. CRIMP THE SUPPLIED RED SPADE TERMINALS TO THE ENDS OF THE CAMERA POWER HARNESS. CONNECT THE WHITE-STRIPED WIRE TO THE SUPPLIED FUSE, CONNECT THE FUSE TO REVERSE LIGHT POWER, AND CONNECT THE OTHER BLACK WIRE TO GROUND USING THE SUPPLIED RED AND BLUE T-TAPS (**FIGURES 4,6**). MATE THE RCA AND DC PLUGS OF THE **CAMERA EXTENSION HARNESS** TO THE **INTERFACE** AND **POWER HARNESSES** AT THE RADIO. SHIFT TO REVERSE TO CHECK FOR AN IMAGE ON THE DISPLAY.

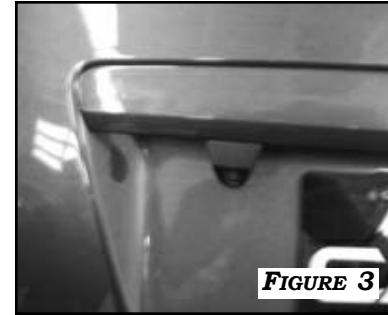


FIGURE 3

CONNECT THE **CAMERA EXTENSION HARNESS** TO THE **CAMERA HARNESS** AND ROUTE IT FROM THE TRUNK LID TO THE DASH. REMOVE THE 24-PIN CONNECTOR FROM THE RADIO. INSERT THE **WHITE WIRE** OF THE **NAVIGATION INTERFACE HARNESS** INTO PIN 23 OF THE CONNECTOR AND INSERT THE RED WIRE INTO PIN 22 OF THE CONNECTOR (**FIGURES 4-5**). THE TERMINALS WILL ONLY FIT INTO THE

CONNECTOR IN ONE DIRECTION. MAKE SURE THEY SNAP INTO PLACE, RE-ENGAGE THE TERMINAL RETAINER AND REPLACE THE CONNECTOR. CRIMP THE SUPPLIED RED SPADE TERMINALS TO THE ENDS OF THE CAMERA POWER HARNESS. CONNECT THE WHITE-STRIPED WIRE TO THE SUPPLIED FUSE, CONNECT THE FUSE TO REVERSE LIGHT POWER, AND CONNECT THE OTHER BLACK WIRE TO GROUND USING THE SUPPLIED RED AND BLUE T-TAPS (**FIGURES 4,6**). MATE THE RCA AND DC PLUGS OF THE **CAMERA EXTENSION HARNESS** TO THE **INTERFACE** AND **POWER HARNESSES** AT THE RADIO. SHIFT TO REVERSE TO CHECK FOR AN IMAGE ON THE DISPLAY.

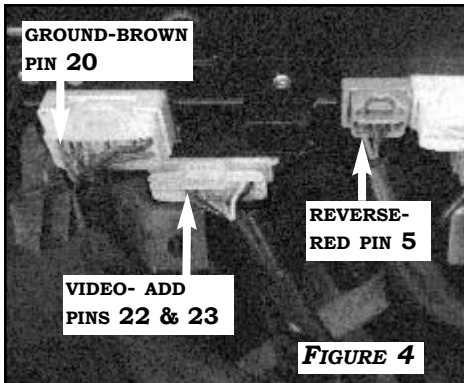


FIGURE 4

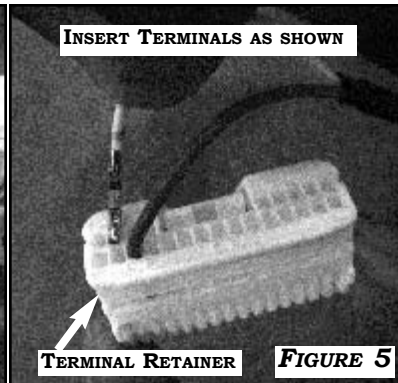


FIGURE 5

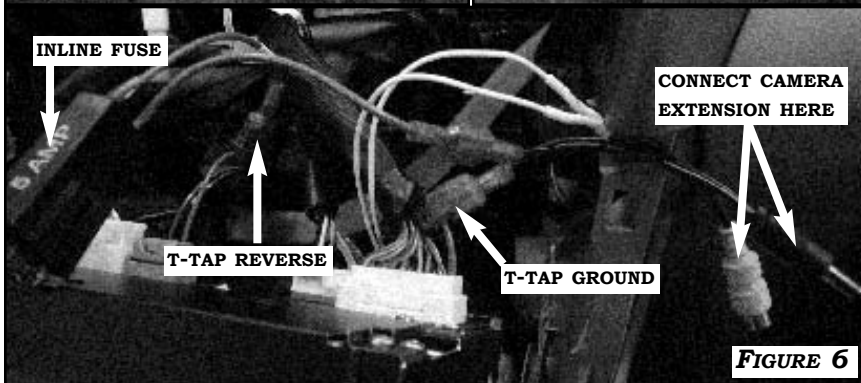


FIGURE 6

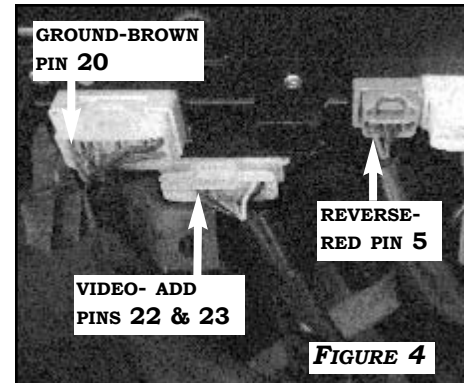


FIGURE 4

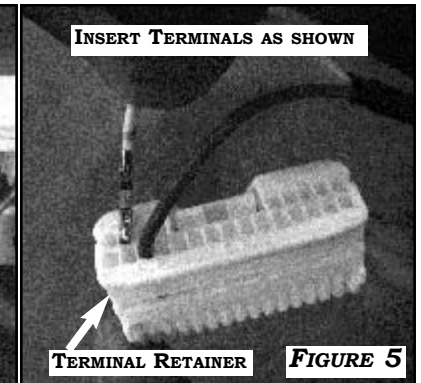


FIGURE 5

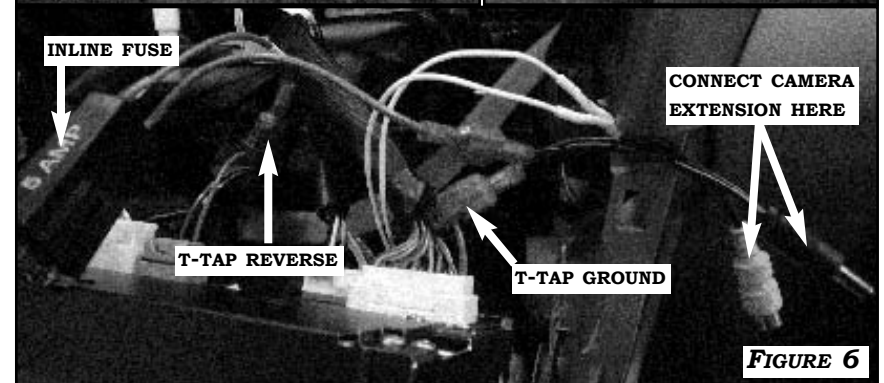


FIGURE 6