

Part Number: 250-8160-BSC

*BEFORE BEGINNING INSTALLATION, FAMILIARIZE YOURSELF WITH THE INSTALLATION INSTRUCTIONS AND THE REARSIGHT BACK-UP CAMERA SYSTEM COMPONENTS.



CAUTION: IT IS ADVISABLE TO DISCONNECT THE NEGATIVE BATTERY CABLE FOR 3 MINUTES BEFORE BEGINNING INSTALLATION, TO AVOID UNINTENDED AIR BAG DEPLOYMENT. NOTE AND RECORD ANY ANTI-THEFT RADIO CODES PRIOR TO DISCONNECTING.

This camera is designed as a Universal Fit Camera. You must familiarize yourself with the vehicle you are working on and how to disassemble the parts needed to install, route the cables, and access the systems needed to activate and power the camera. This manual will cover the basic installation wiring, and features of the camera only.

- Suggested mounting locations are:
- Blind Spot: Under the driver and passenger side mirrors facing backward.
- Reverse Camera: Under the vehicle trunk lip or other suitable locations.
- Front view camera: In the vehicle grill or other suitable locations.

Note: The camera has a small top position indicator on the camera body. The camera can be rotated to match the mounting position if needed. Use caution and rotate the camera body slowly.

Select your mounting location and double check that drilling a hole will not damage any safety or vehicle components or block the movement of remote control mirrors or other devices.

1. Drill a 1/4" hole to route the camera wire into the vehicle.
2. Clean the area the camera will be mounted to with prep solve surface cleaner or an alcohol cleaning pad. Do not attach the camera until the surface is clean and COMPLETELY dry. If available we recommend treating the area with 3M Brand adhesion promoter 06396 This is available through trim & paint shops.
3. Once clean, dry, and prepped, carefully peel the red backing from the tape backing on the camera. Use caution when the tape is exposed, it will easily attach to any item and is designed for one use. It is not removable without damaging the tape. If damaged clean and re-attach with 3M brand trim tape for refitting.
4. Route the wire inside to an area where connection to the main harness can be made in a dry interior area. *Use caution to not damage the function selection loops when pulling the wire through the drilled hole.
5. Carefully press the camera into position. Press evenly across the base of the camera holding pressure for a few seconds to insure a good bond.
6. Route the wire as needed through the door wire loom and connect the camera lead to the power/video harness and route the harness as needed. *Be sure to watch for power window tracks, motors, or other moving items that the wire could bind on and become damaged.
7. Connect the RCA type yellow connector to the input of your monitor.
8. Connect the Red wire to a power source as needed for your application (+6 to 16VDC).
9. Connect the Black wire to ground (Negative).

Who is covered?

The Company extends this warranty to the original retail purchaser of products purchased through an authorized retailer in the U.S.A., Puerto Rico or Canada.

This warranty is not transferable or assignable. Proof of purchase is required in the form of an original sales receipt or installation receipt.

What is covered?

The Company warrants that should this product or any part thereof, under normal use, be proven defective in material or workmanship within 36 months from the date of original purchase, such defect(s) will be repaired or replaced with a new or reconditioned product (at the Company's option) without charge.

What is not covered?

This Warranty does not cover the following:

Damage incurred during shipping or transporting the product to the Company or a service center, Elimination of car static or motor noise, Defects in cosmetic, decorative, or non-operative structural parts. Costs incurred for installation, removal or reinstallation of the product. Consequential damage to accessories or vehicle electrical systems.

Damage caused by improper installation, mishandling, misuse, neglect, accident, blown fuse, theft or improper storage. Damage resulting from moisture, humidity, excessive temperature, extreme environmental conditions or external natural causes.

To obtain repair or replacement within the terms of this Warranty contact you're original installing dealer.

Limitations:

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.