


2010 HONDA ACCORD
AMPLIFIED HARNESS TECH TIP

FIGURE 1:
LOCATE DOOR HARNESS IN DRIVER'S SIDE KICK PANEL.



FIGURE 2:
CUT WIRES OF DOOR HARNESS AND CONNECT CONVERSE HARNESS AS LABELED:
(+) SPEAKER WIRE - **LIGHT GREEN** WIRE OF DOOR HARNESS
(-) SPEAKER WIRE - **PINK** WIRE OF DOOR HARNESS

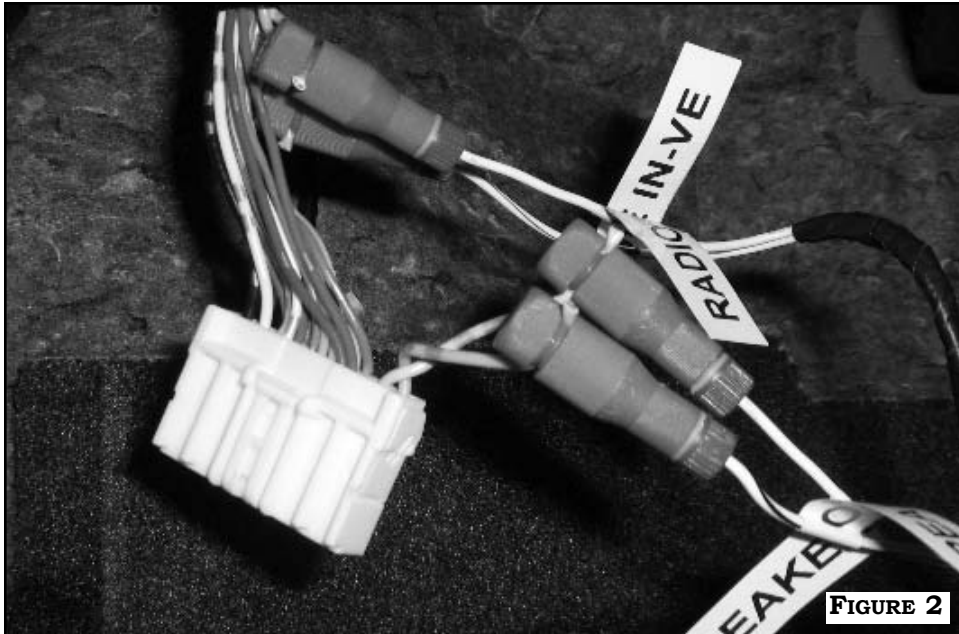

2010 HONDA ACCORD
AMPLIFIED HARNESS TECH TIP

FIGURE 1:
LOCATE DOOR HARNESS IN DRIVER'S SIDE KICK PANEL.



FIGURE 2:
CUT WIRES OF DOOR HARNESS AND CONNECT CONVERSE HARNESS AS LABELED:
(+) SPEAKER WIRE - **LIGHT GREEN** WIRE OF DOOR HARNESS
(-) SPEAKER WIRE - **PINK** WIRE OF DOOR HARNESS

