

**2011 HONDA CRV WITH NON-MUTING SUB
CONVERSE BLUETOOTH TECH TIP**

FIGURE 1:
DISCONNECT CARKIT ADAPTER CONNETOR FROM BLUETOOTH HARNESS MODULE.



**2011 HONDA CRV WITH NON-MUTING SUB
CONVERSE BLUETOOTH TECH TIP**

FIGURE 1:
DISCONNECT CARKIT ADAPTER CONNETOR FROM BLUETOOTH HARNESS MODULE.



FIGURE 2:
LOCATE **WHITE AND WHITE/BLACK WIRES** OF CARKIT ADAPTER CONNECTOR. CUT WHITE AND WHITE/BLACK WIRES FROM CONNECTOR. SOLDER WIRES TO MATING COLORS OF THE SPEAKER CONNECTOR OF THE MODULE.

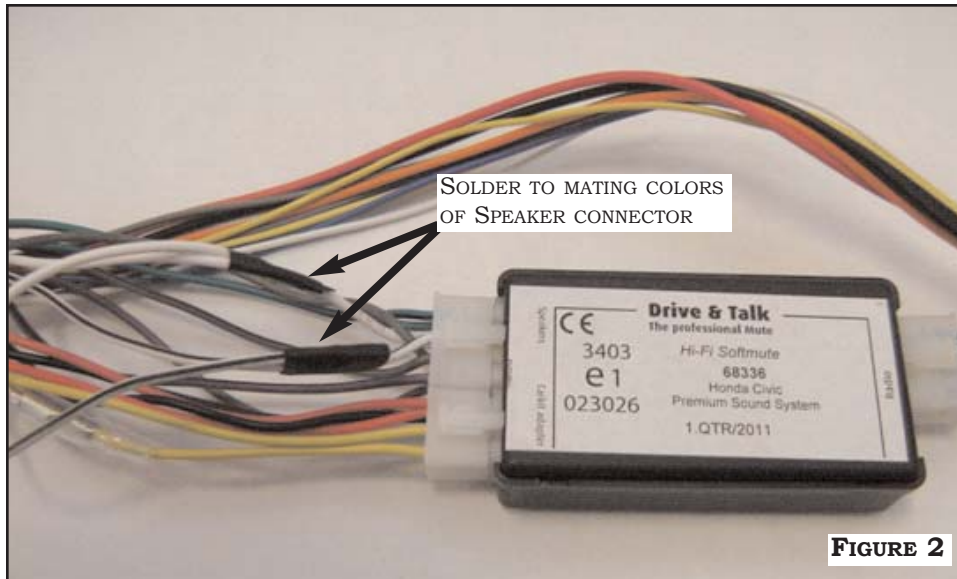


FIGURE 2:
LOCATE **WHITE AND WHITE/BLACK WIRES** OF CARKIT ADAPTER CONNECTOR. CUT WHITE AND WHITE/BLACK WIRES FROM CONNECTOR. SOLDER WIRES TO MATING COLORS OF THE SPEAKER CONNECTOR OF THE MODULE.

